



# INSTALLATION INSTRUCTIONS

Accessory  
Honda MUSIC LINK 2.0


Application  
2007 ACCORD  
4-DOOR

Publications No.  
All 40629  
Issue Date  
SEP 2008

## PARTS LIST

Attachment Kit  
P/N:08A28-0J1-800

Adapter bracket A

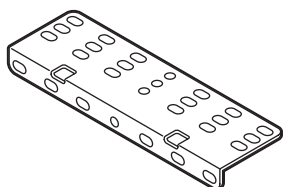

2 Adapter brackets B  
(1 Not used)



Grommet  
(Not used)



2 Screws, 4 x 10 mm  
(Not used)




2 Bolts, 5 x 8 mm



2 Washer-screws, 5 x 16 mm  
(Not used)



2 Flange bolts, 6 x 12 mm  
(Not used)

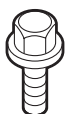

2 Flange nuts, 4 mm  
(Not used)



2 Flange nuts, 5 mm  
(Not used)



2 Flange nuts, 6 mm  
(Not used)




4 Plain washers, 5 mm




2 Screw caps, 4 mm  
(Not used)




2 Wire ties with clip  
(1 Not used)

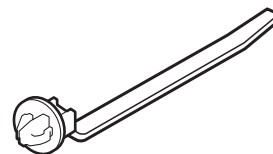


8 Wire ties  
(Some not used)

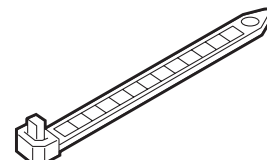

- 4 Urethane tapes  
(1 Not used)

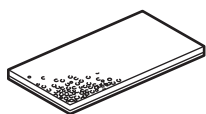


- 2 Cushion tapes

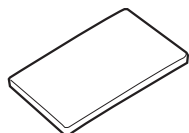


**Honda Music Link Adapter Kit (sold separately)**  
**P/N:08A28-1J1-100**


Adapter unit

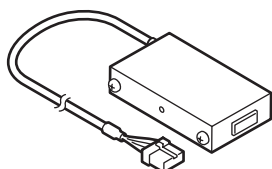

Music Link harness

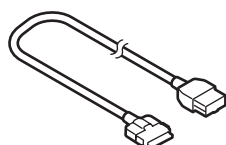


Accessory User's Information Manual

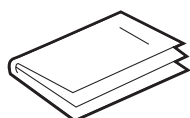

**Bus cable 2-port (sold separately)**  
**P/N: 08A31-0F1-000**

Bus cable 2-port

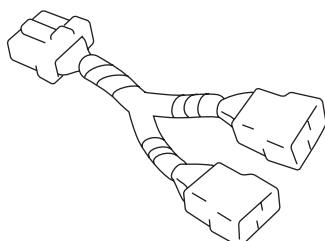

**TOOLS AND SUPPLIES REQUIRED**

Phillips screwdriver

Flat-tip screwdriver

Stubby flat-tip screwdriver

Shop towel

Nippers

Ratchet

Utility knife

Isopropyl alcohol

Felt-tip pen

10 mm and 14 mm Spanners

Scale

File


Hook tool

Masking tape


White plastic trim tool

***Illustration of the Honda Music Link Installed on the Vehicle***

Navigation Model

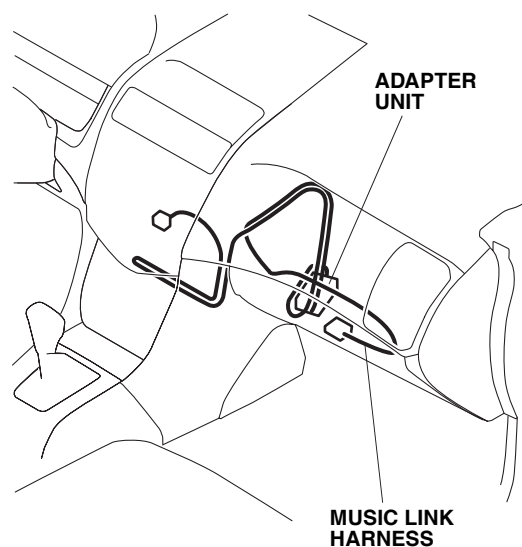

## Audio Model

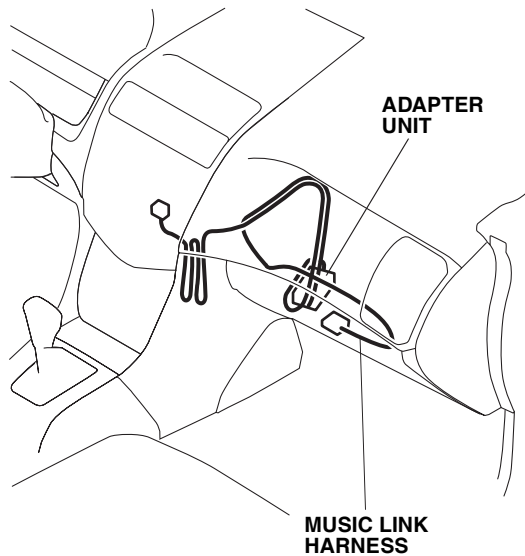

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.


## Removing the vehicle parts

3. Remove the trim ring.

If the vehicle is M/T Model, go to step 4; if the vehicle is A/T Model, go to step 8.


### M/T Model

4. Squeeze the plastic clip and pull down on the shift boot. Remove the shift knob by turning it counterclockwise.

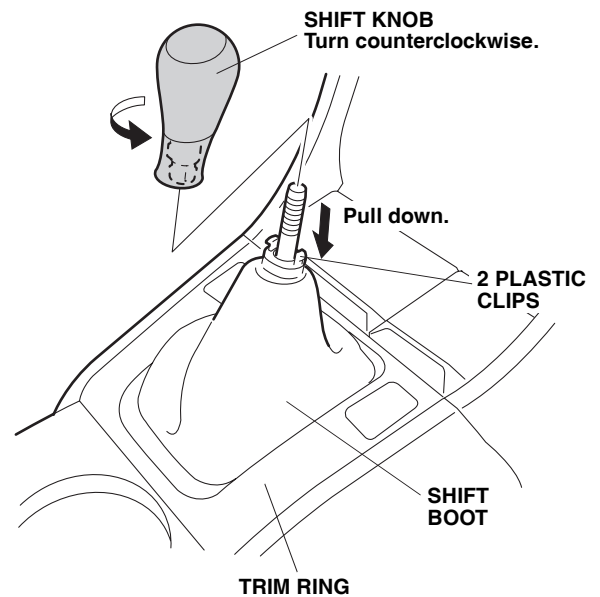


### Lock Nut Type

5. Loosen the lock nut and remove the shift knob.

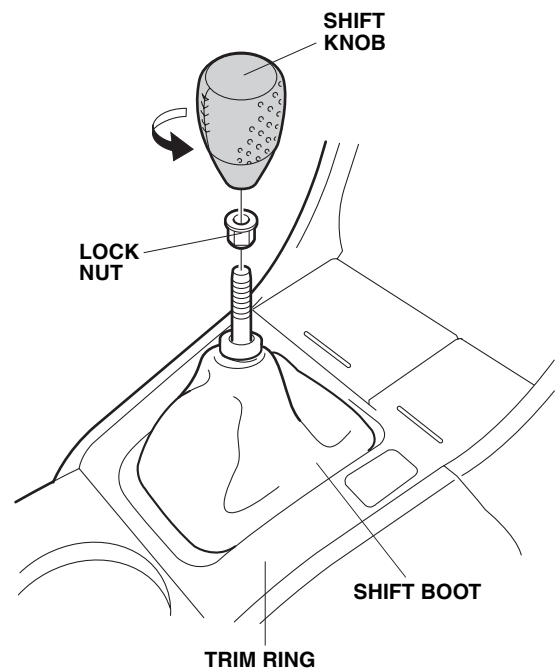


6. Gently pry up on the front of the trim ring to release two clips, and lift the trim ring by releasing four clips.
7. Disconnect the seat heater connectors (if equipped), and remove the trim ring. Go to step 10.

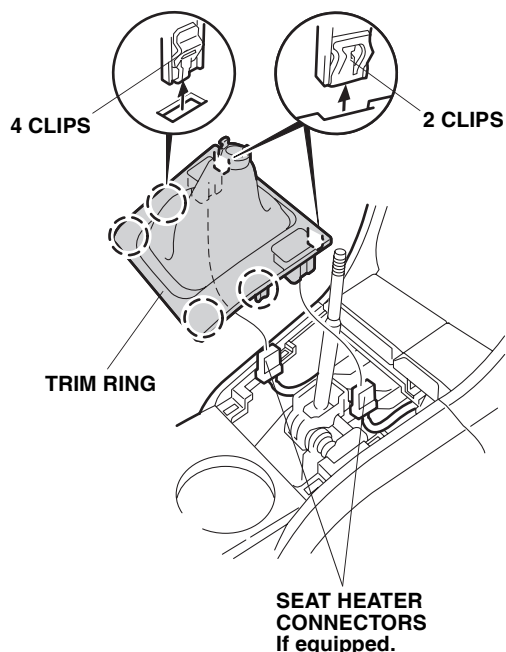

#### A/T Model

8. Gently pry up on the front of the trim ring to release two clips, and lift the trim ring by releasing four clips.
9. Disconnect the seat heater connectors (if equipped), and remove the trim ring.

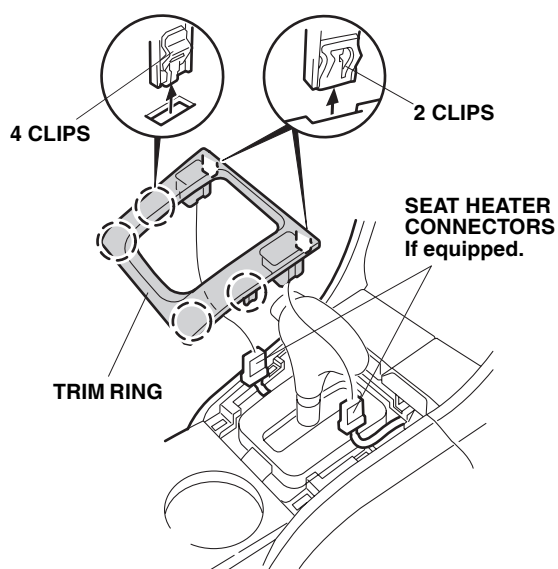


10. Remove the dashboard center holder.

If the vehicle is equipped with the ashtray, go to step 14; if not, go to step 11.


#### Without Ashtray

11. Open the coin pocket lid and remove the coin pocket as shown.
12. Remove two self-tapping screws.
13. Gently pull out on the dashboard center holder to release two retaining clips, disconnect the vehicle connector, and remove the dashboard center holder. Go to step 17.

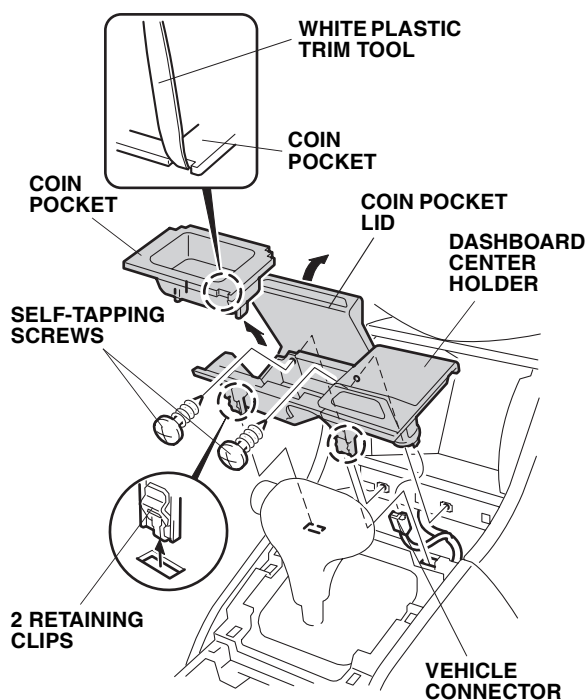

### With Ashtray


14. Open the lid and remove the ashtray.
15. Remove two self-tapping screws.
16. Gently pull out on two retaining clips, disconnect the cigarette lighter harness connector, vehicle connector, illumination bulb, and remove the dashboard center holder.

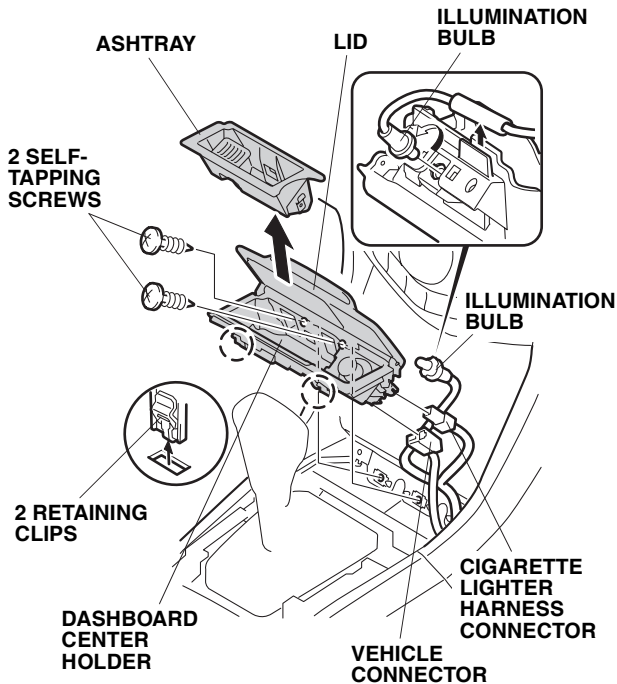


If the vehicle is equipped with cassette or multi-media players, go to step 22; if not, go to step 17.

### Without Cassette or Multi-Media Players

17. Remove the pocket:
18. Apply a masking tape to the edge of the center panel.
19. Remove two self-tapping screws.
20. Attach masking tape around the end of the hook tool. Push on the bottom of the lid, then pull out on the top by inserting the end of a hook tool between the pocket and center panel, and pull it toward you to release two retaining clips. When removing the pocket, do not damage the lid.

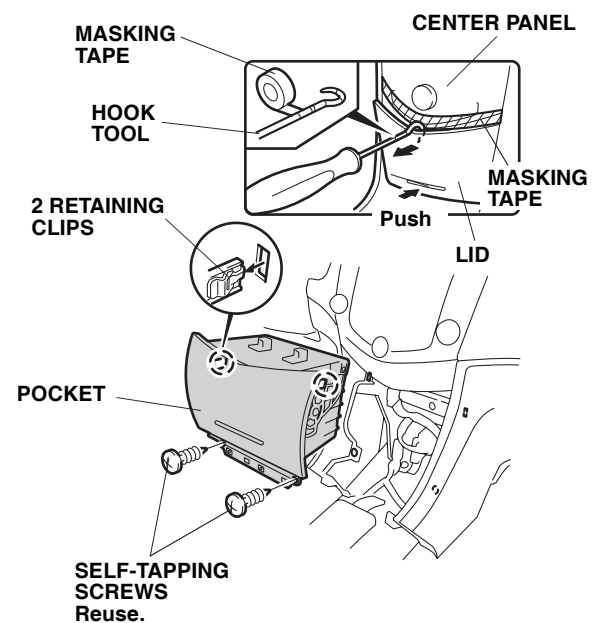


21. Remove the right inner cover and the left inner cover (one hook and one clip for each cover). Go to step 30.

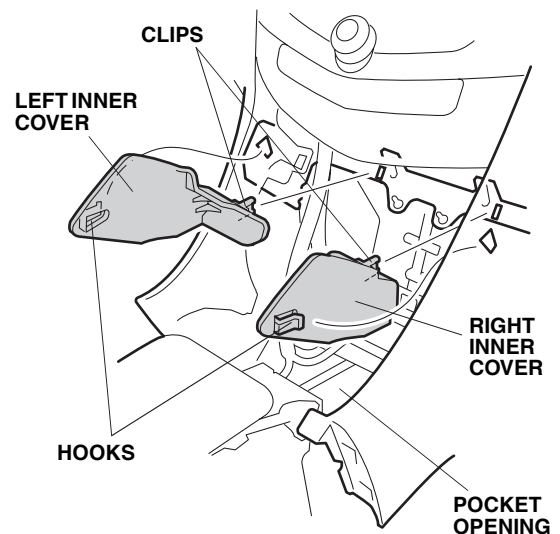


### With Cassette or Multi-Media Players


22. Remove the cassette or multi-media players.
23. Attach the masking tapes to the instrument panel as shown.

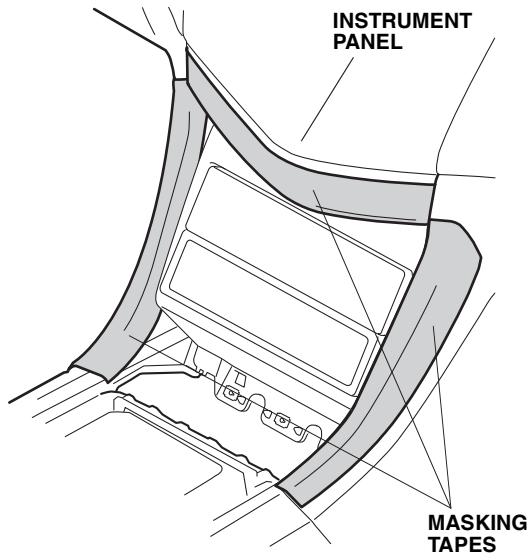

24. Remove the player panel (two self-tapping screws and two clips).

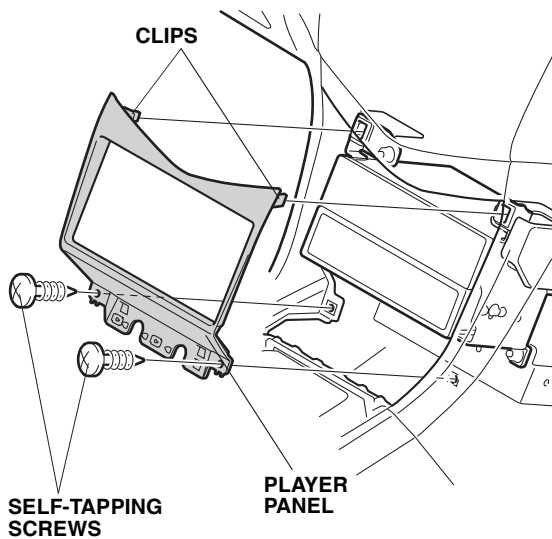


25. Remove four nuts fastening the player and the pocket. Remove the player and the pocket by pulling it out toward you, and disconnect the player bus cable connector.

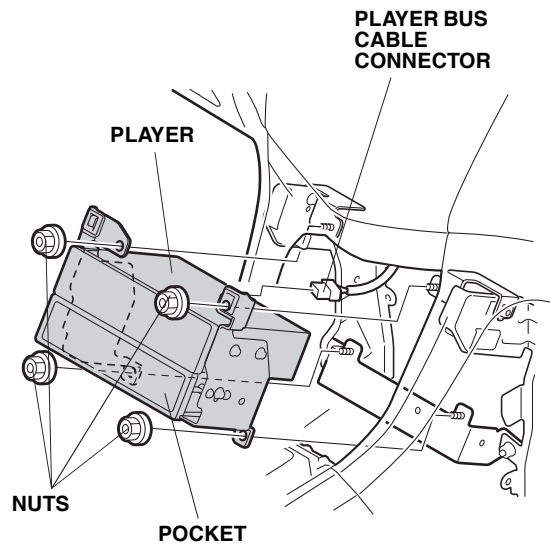


If the vehicle is equipped with Navigation, go to step 26; if not, go to step 30.


26. Using a white plastic trim tool, push down and pull to release the center clip, carefully insert a white plastic trim tool into the slots (A) on both sides of the upper cover, then pull out each side of the panel back to disengage two clips.

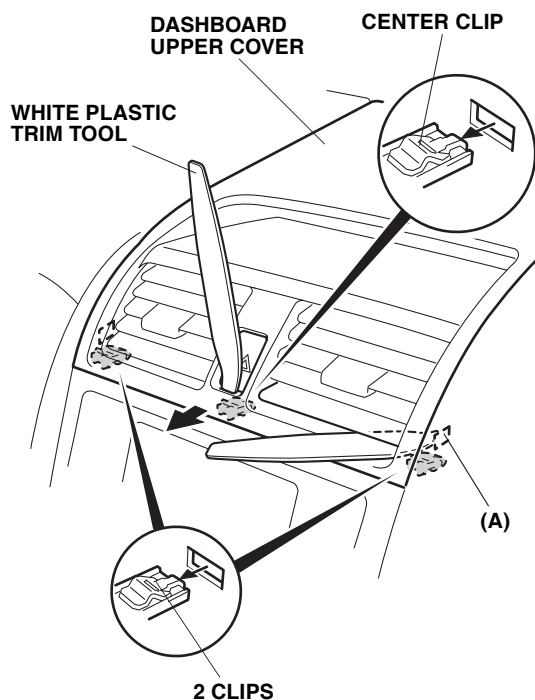


27. Using a hook tool, reach inside the vent of the dashboard upper cover and locate the small opening on each side. Gently pull out on eight clips to release the dashboard upper cover.
28. Remove the dashboard upper cover (two vehicle clips and disconnect the vehicle connectors).

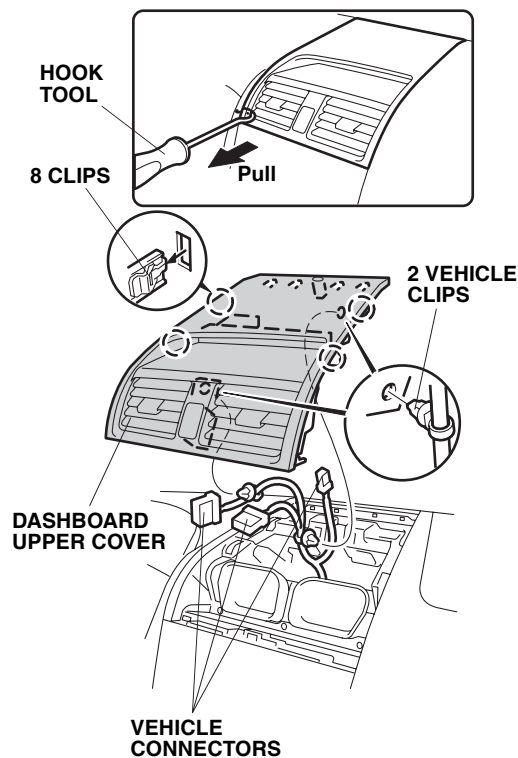


29. Remove the center panel (three self-tapping screws, two bolts, five clips and disconnect the vehicle connectors).

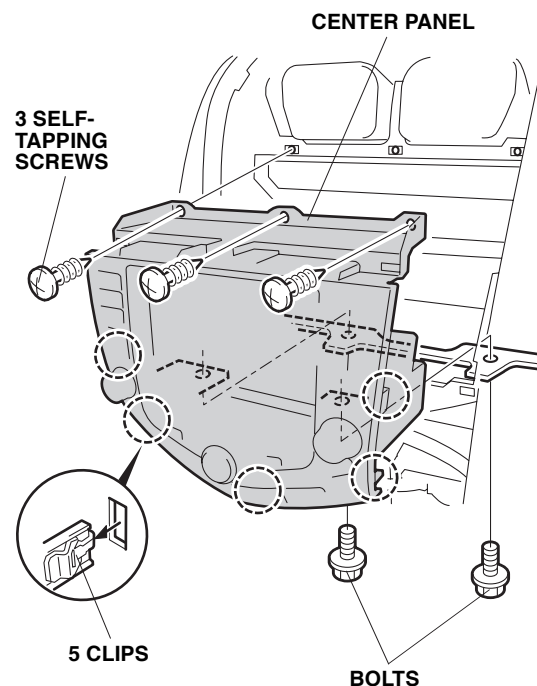

30. Remove the passenger's under cover (three clips and three pins).

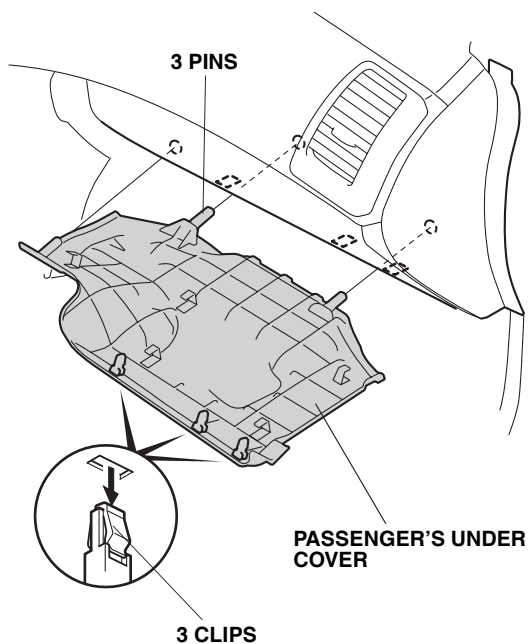


31. Remove the glove box (one damper rod and two bolts).

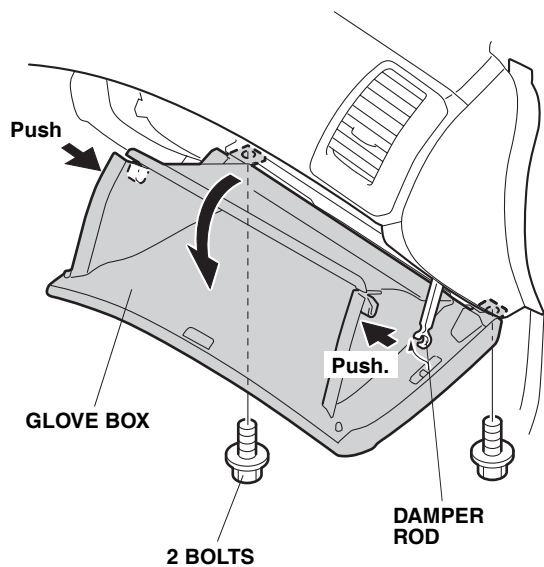


## Installing the adapter unit and routing the harness

32. Attach masking tape to the Music Link harness at the indicated position.

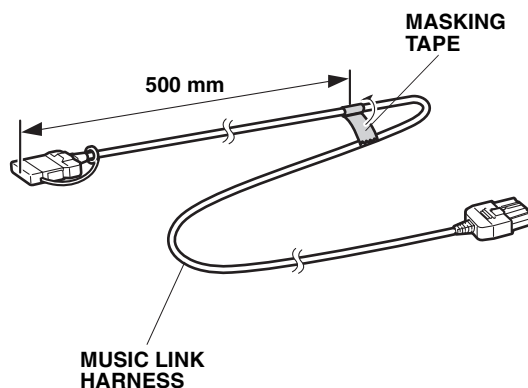


33. Cut one cushion tape into the dimensions as shown.

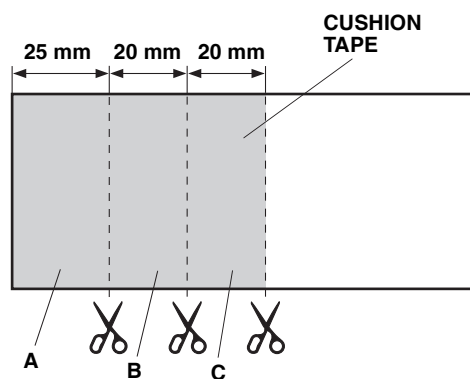





34. Remove one screw from the adapter unit.
35. Install the adapter bracket B with one screw removed (reuse) from the adapter unit. Install the adapter bracket B at the correct position in the correct orientation.

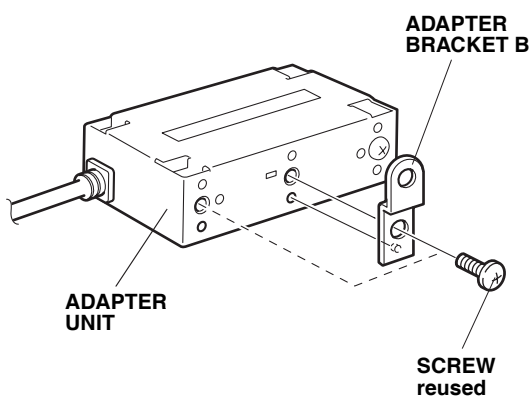


36. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the cushion tape will attach. Attach the cushion tape A cut in step 37 to the adapter unit shown.

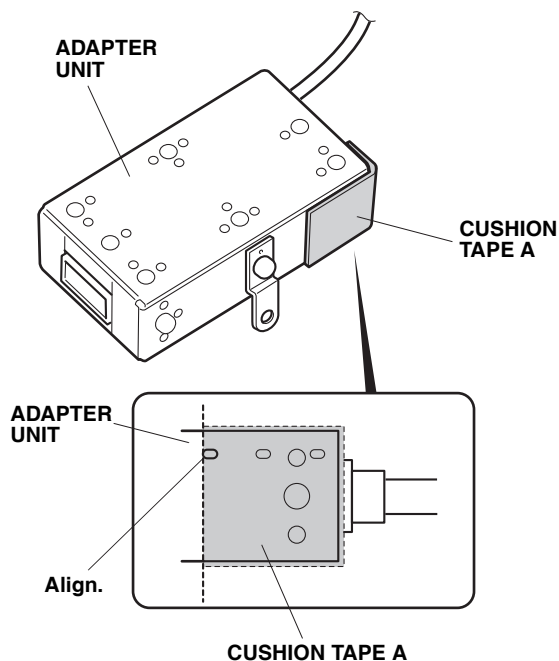


37. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the cushion tape will attach. Attach the cushion tape B cut in step 37 to the adapter unit as shown.

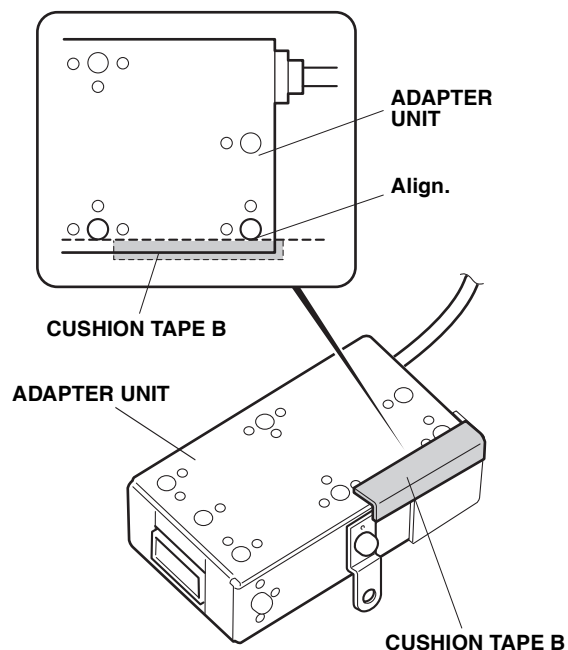


38. Using a felt-tip pen, mark the adapter bracket A at the indicated positions.
39. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the cushion tape will attach. Attach the cushion tape C cut in step 37 to the adapter bracket A as shown.

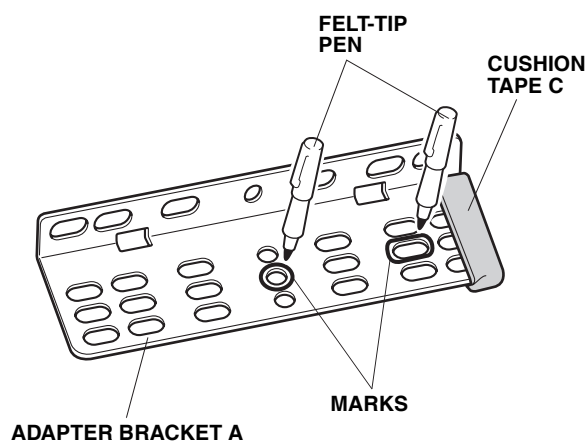


40. Temporarily secure the adapter bracket A according to the marks made in step 42 on the adapter unit with two 5 x 8 mm bolts and two 5 mm plain washers.
41. Using a felt-tip pen, mark the adapter unit at the indicated position.
42. Remove adapter bracket A temporarily secured in step 44.

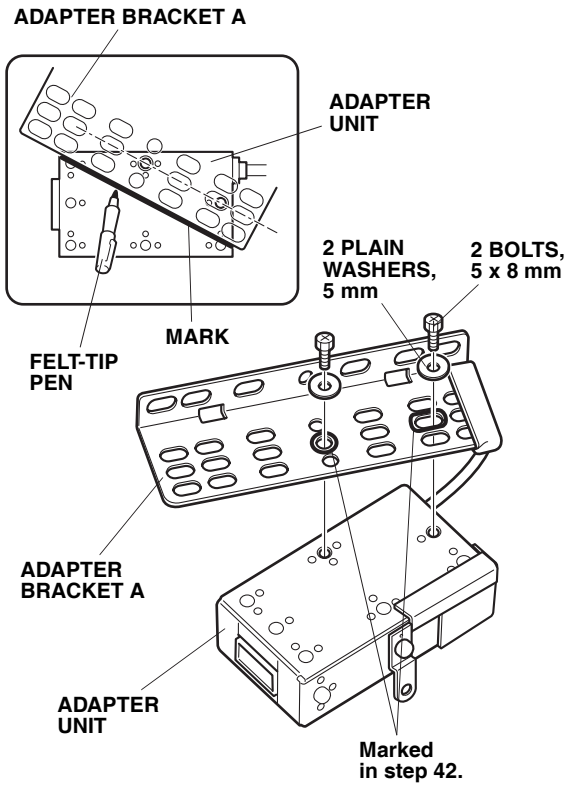


43. Using a felt-tip pen, mark the installation position of the adapter bracket A on the adapter unit.

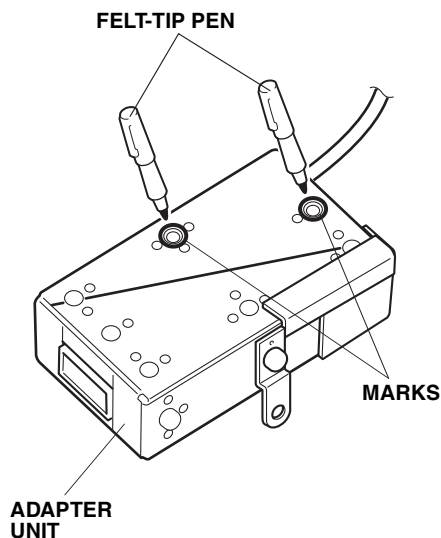


44. Using a felt-tip pen, mark the vehicle relay and holder as shown. Remove the vehicle relay near the vehicle relay holder as shown. Insert the flat-tip end of the stubby to the vehicle relay holder, then remove the vehicle relay holder from the vehicle bracket.
45. Reinstall the vehicle relays in the reverse order of removal by aligning the marks.
46. Release the vehicle clip, and disconnect the vehicle connector.

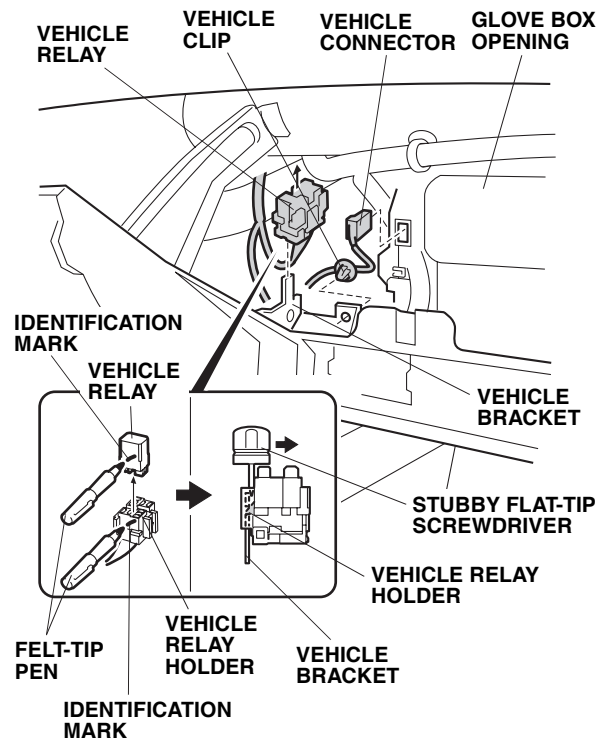


47. Remove two self-tapping screws on the side of the heater unit.
48. Install the adapter bracket A with two self-tapping screws removed in step 51 and two 5 mm plain washers to the heater unit.

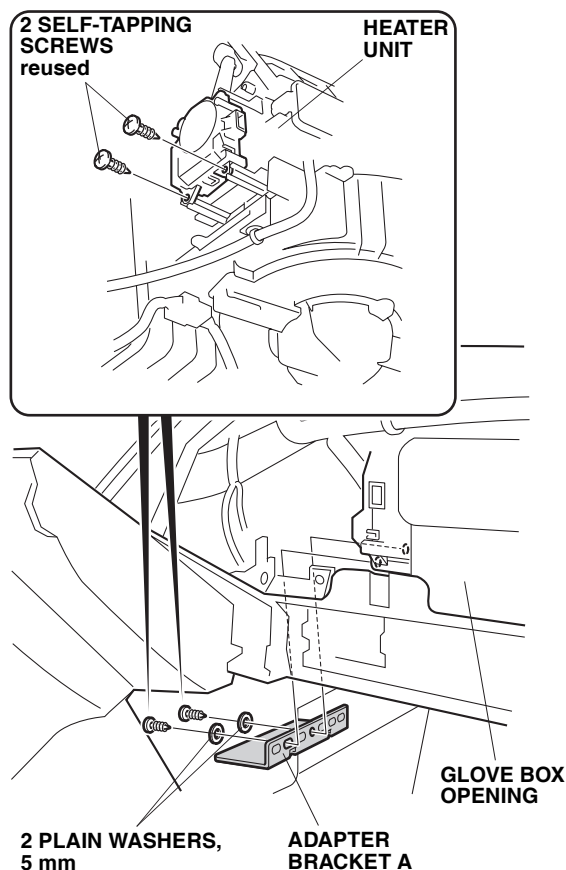


49. Attach a masking tape to the Music Link harness at the indicated position.
50. Cut one urethane tape in half and attach one half of the urethane tape to the Music Link harness.

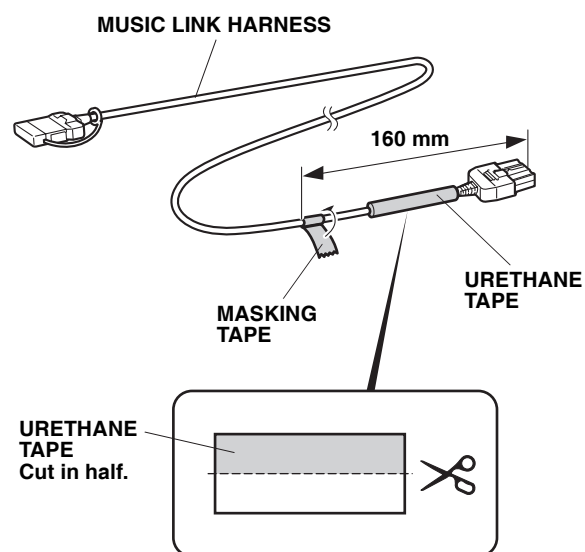


51. Secure one wire tie with clip at the position of the masking tape attached in step 53 and secure it to the adapter bracket B.
52. Connect the Music Link harness connector to the adapter unit.

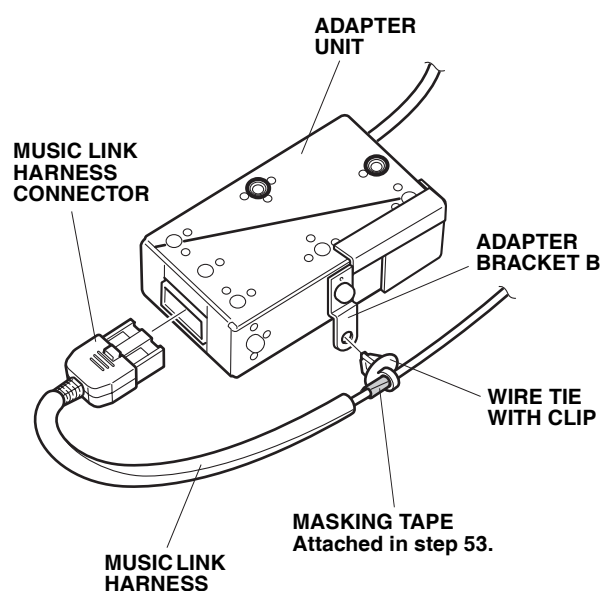

53. Install the adapter unit to adapter bracket A with two 5 x 8 mm bolts, two 5 mm plain washers, and match the marks made in steps 42, 45, and 47.

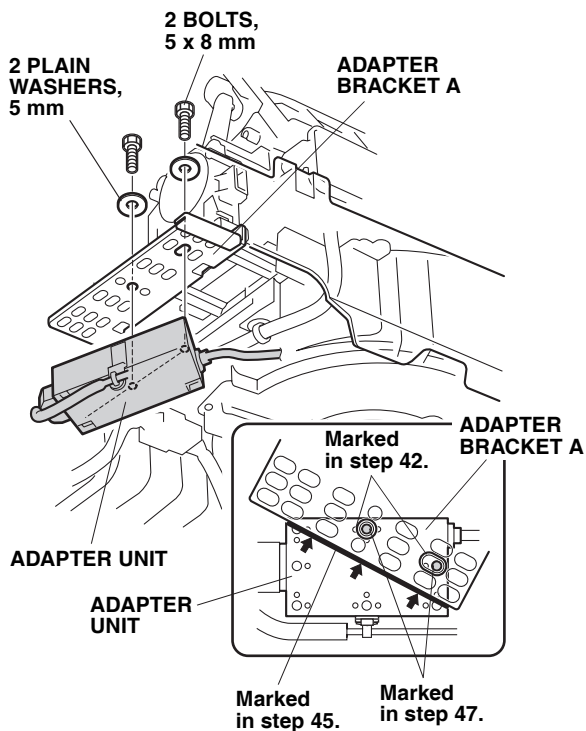


54. Route the Music Link harness and the adapter unit harness to the glove box opening.
55. Secure the Music Link harness to the vehicle harness with one wire tie.

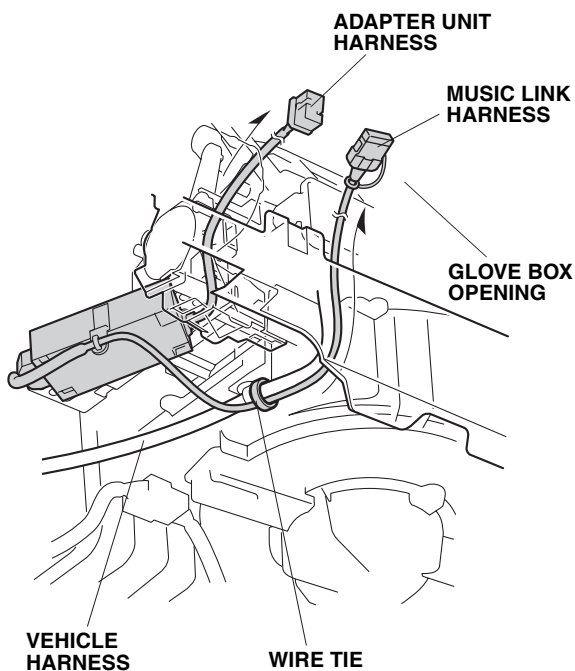


If the vehicle is Audio model, go to step 56; if the vehicle is Navigation model, go to step 64.

#### Audio Model


56. Loosely secure the adapter unit harness and the Music Link harness to the vehicle harness with one wire tie.

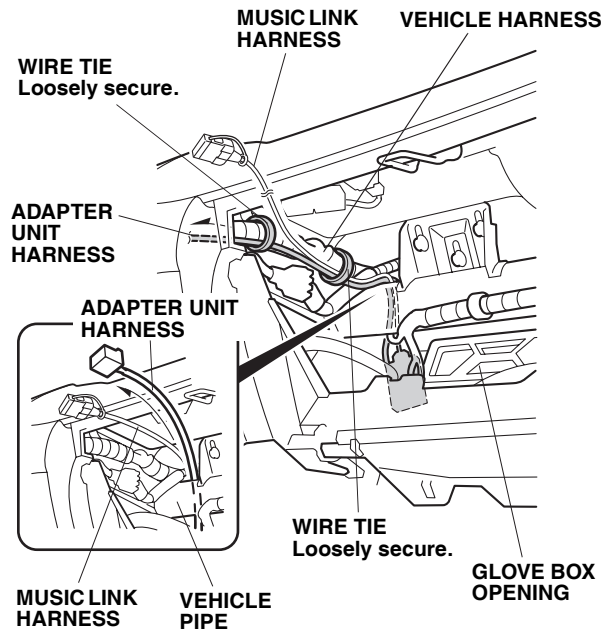


57. Loosely secure the adapter unit harness to the vehicle harness with one wire tie.
58. Loosely secure the Music Link harness to the vehicle harness with one wire tie at the position of the masking tape attached in step 36.

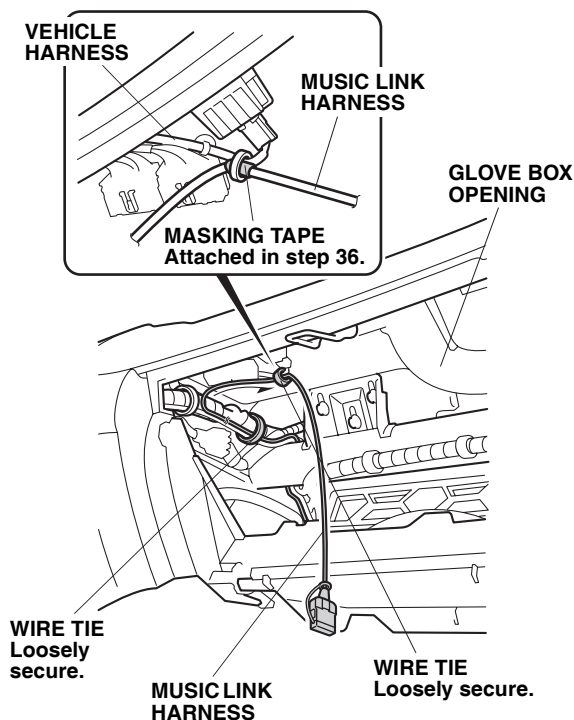


59. Bundle the excess Music Link harness and secure it to the vehicle harness with two wire ties loosely secured in step 60.

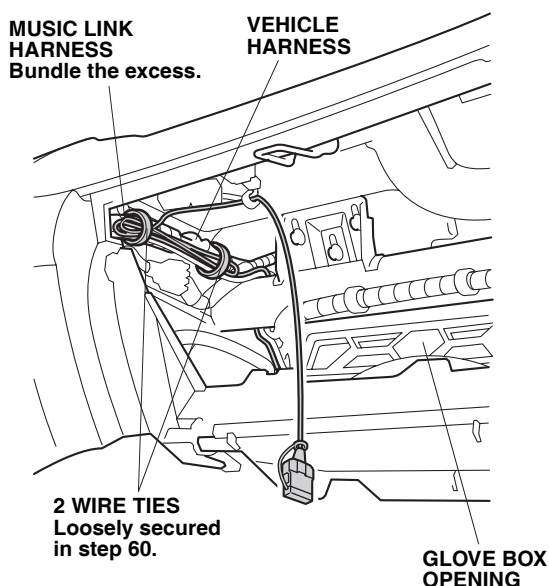


60. Using an isopropyl alcohol on a shop towel, thoroughly clean the area where the cushion tape will attach. Cut one cushion tape in half and attach two pieces of the urethane tape to the edge part of the vehicle bracket as shown.

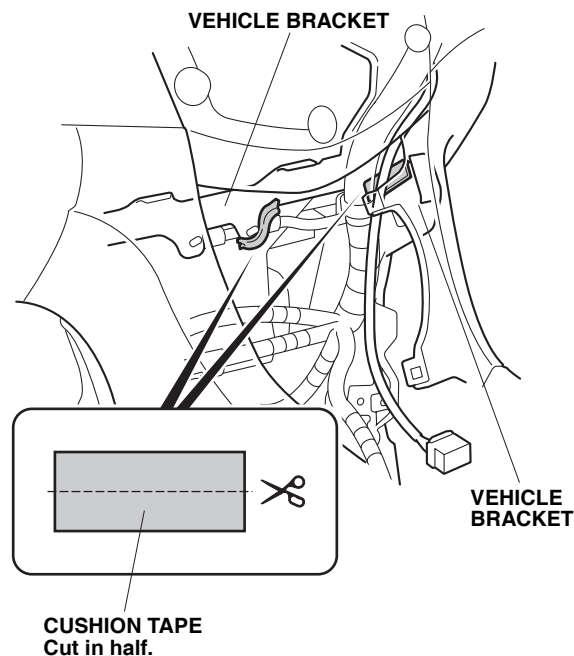

61. Connect the adapter unit connector to the vehicle 14-pin connector.
62. Reinstall the right inner cover.

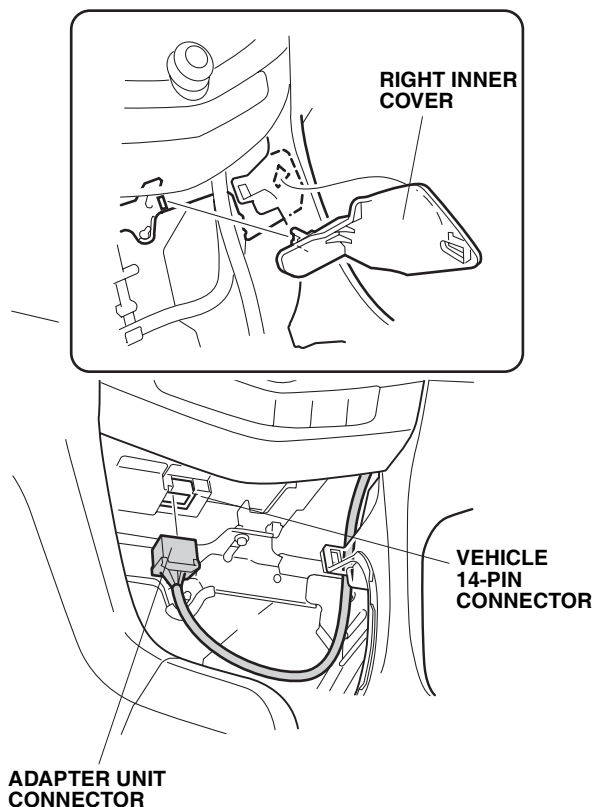


63. Bundle the excess adapter unit harness so that it does not come into contact with the right inner cover. Secure the adapter unit harness to the vehicle harness with two wire ties. Tighten two wire ties loosely, move a bundle of the adapter unit harness toward the front and then tighten the two wire ties securely. Go to step 82.

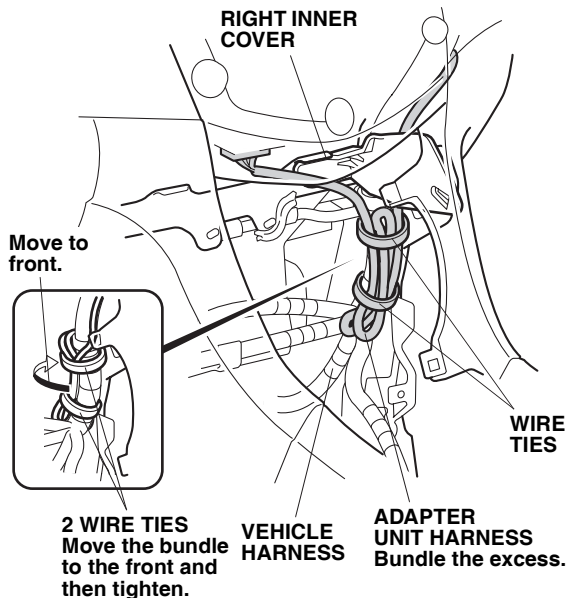


#### Navigation Model


64. Remove the tape from the vehicle 14-pin connector. Disconnect the vehicle 14-pin connector. Connect the bus cable 2-port 14-pin connectors in between.
65. Attach one cushion tape to the bus cable 2-port 14-pin connector.

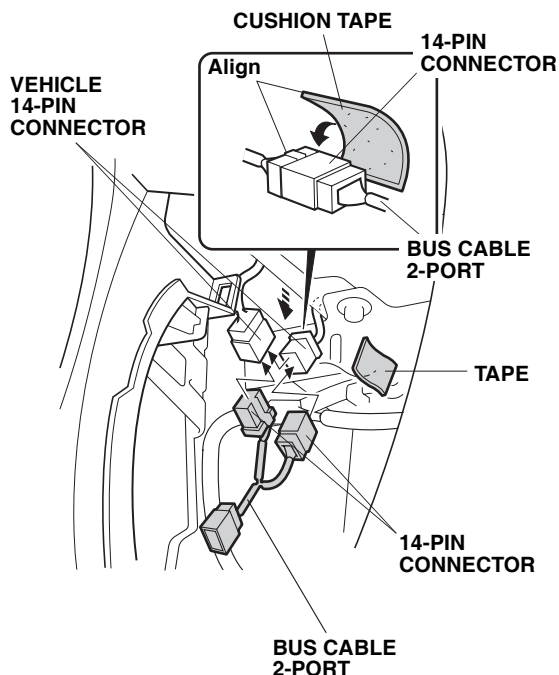

66. Connect the bus cable 14-pin connector to the bus cable 2-port 14-pin connector, and attach one cushion tape to the bus cable 2-port 14-pin connector. Secure the bus cable 2-port and bus cable to the vehicle harness with the two wire ties.
67. Bundle the excess bus cable, and secure them to the vehicle harness with two wire ties.

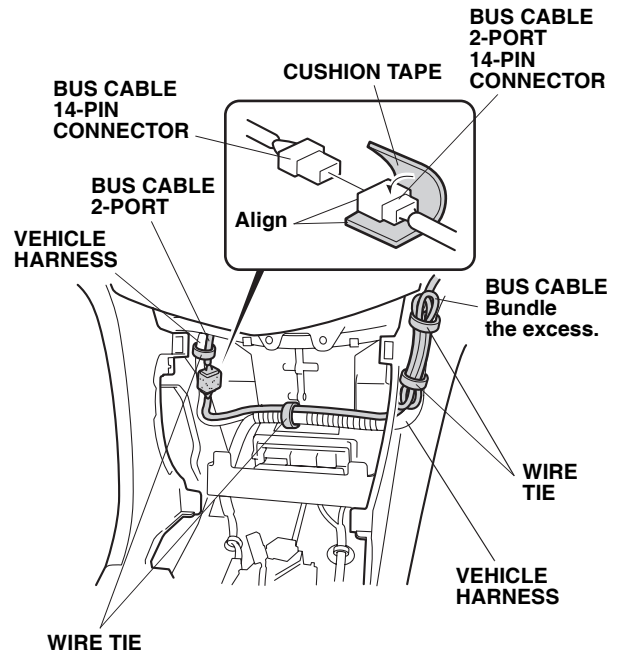


68. Secure the adapter unit harness and the Music Link harness to the vehicle harness with two wire ties.

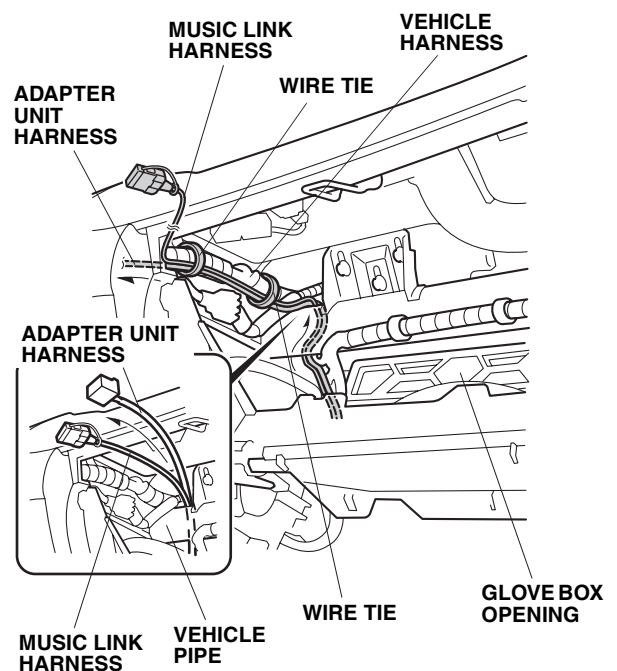





69. Secure the Music Link harness to the vehicle harness with one wire tie.

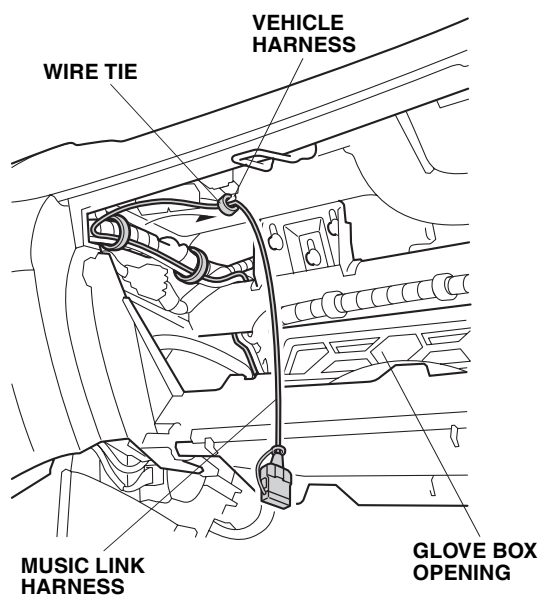


70. Route the adapter unit harness to the pocket opening.

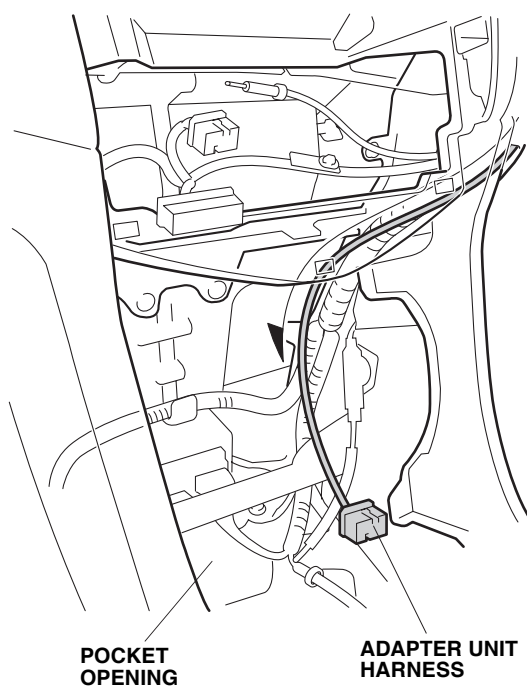


71. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the cushion tape will attach. Cut one cushion tape to the indicated dimensions and attach it to the vehicle bracket.

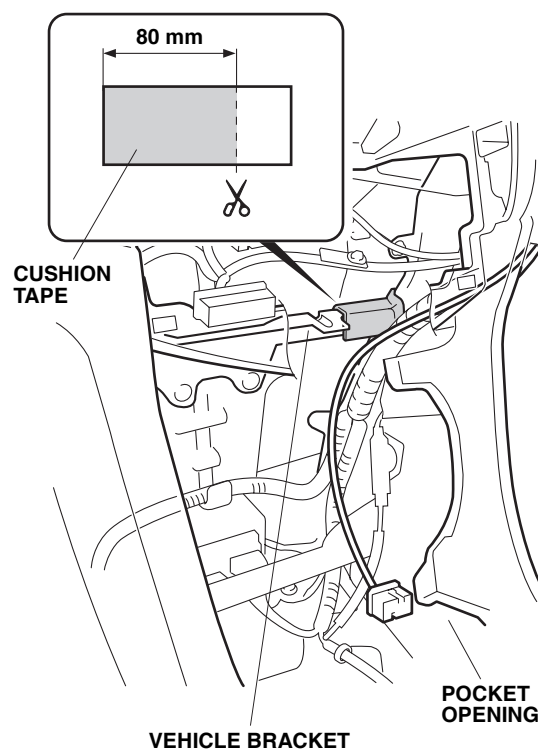


72. Align the vehicle 20-pin connector of the adapter unit at the center panel opening and secure the harness of the adapter unit to the vehicle harness with three wire ties as shown.

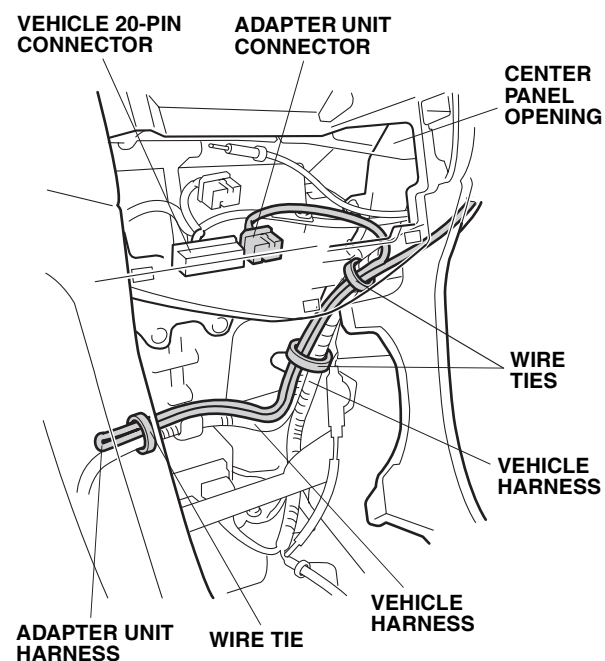


73. Connect the adapter unit 14-pin connector and the other 14-pin connector to the bus cable 2-port 14-pin connector.
74. Attach one urethane tape around each bus cable 2-port 14-pin connector.
75. Secure the bus cable 2-port joint to the antenna lead with one wire tie.

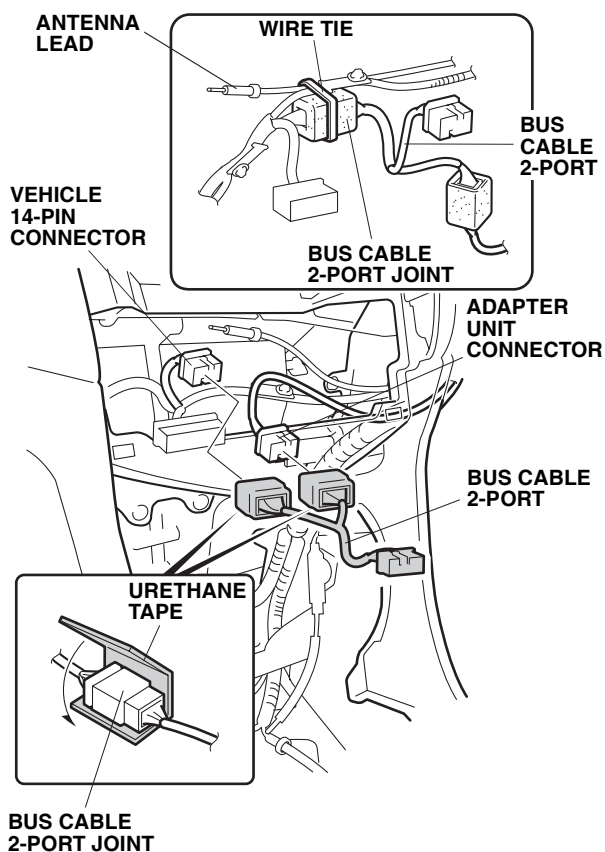

76. Connect the bus cable 2-port and antenna lead to the navigation unit.

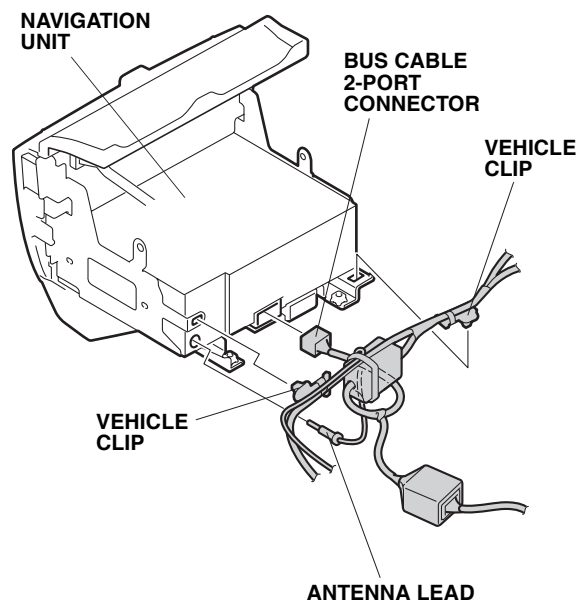

77. Install two vehicle clips to the navigation unit.
78. Reinstall the glove box to its original position and store the Music Link harness.

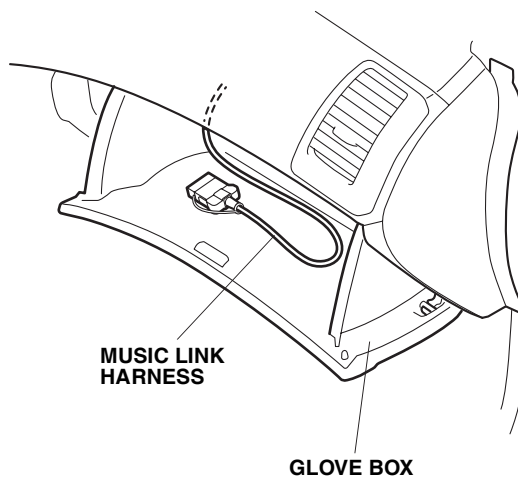



79. Check that all wire harnesses are routed properly and all connectors are plugged in.
80. Reconnect the negative cable to the battery.
81. Reinstall all removed parts.
82. Enter the customer's radio anti-theft code, and reset the radio station presets.
83. **Turn the radio unit ON. Set mode to Honda Music Link by pressing "CD" until display "CDC" or "CD4" is shown on the radio display. Check that the mode changes to the CD changer mode properly ("CDC" or "CD4" is shown on the radio display).**

NOTE: When the battery is disconnected, the driver's window AUTO function is disabled.

- Start the engine. Push down on the driver's window switch until the window is fully open.
- Pull up on the driver's window switch to close the window completely, then hold the switch for 1 second or more.
- Lower and raise the driver's window to check operation of the driver's window AUTO function.