



INSTALLATION INSTRUCTIONS


Accessory
CENTER CAP H-MARK
P/N 08W40-SDB-100A (CHROME)
P/N 08W40-SDB-100B (GOLD)

Application
2005 ACCORD
2- AND 4-DOOR


Publications No.
A11 27454
Issue Date
AUG 2004

PARTS LIST

4 Center cap emblems

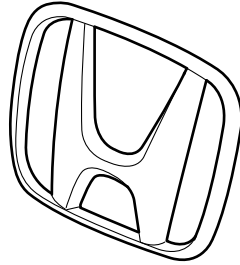

8 Push nuts



SUPPLIES REQUIRED


Isopropyl alcohol
Shop towel

INSTALLATION

NOTE:

- Be careful not to damage the wheel center cap when installing the emblems.
- This center cap emblem kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to “cure,” do not wash the car for 24 hours.
- These instructions are for one center cap emblem. The same procedure applies to installing the three remaining center cap emblems.

1. Using isopropyl alcohol on a shop towel, clean the area where the center cap emblem will attach.
2. Remove the adhesive backing from the center cap emblem.
3. Attach the center cap emblem to the wheel center cap by aligning its pins with the holes in the wheel center cap. After attaching, hold the emblem firmly against the wheel center cap with the palm of your hand for 30 seconds.

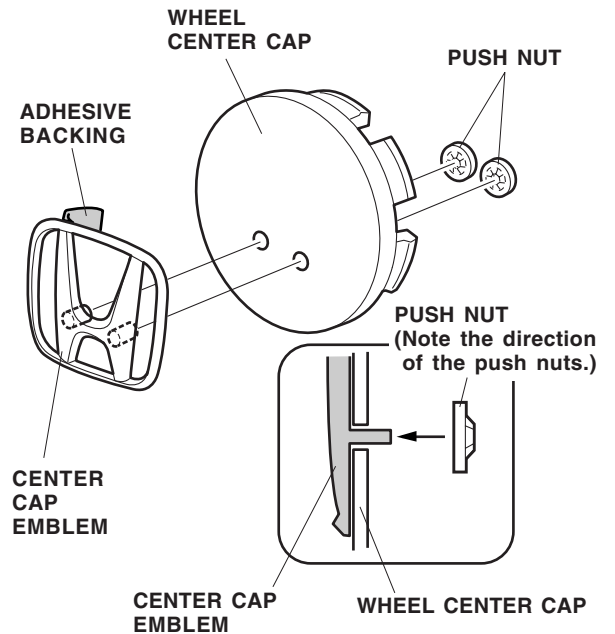

4. Slide the push nuts onto the pins flat side first. Note the direction of the push nuts.
5. Repeat steps 1 thru 4 to install the three remaining center cap emblems.