



# INSTALLATION INSTRUCTIONS

Accessory

**CENTER CAP H-MARK**  
P/N 08W40-SDB-100A (CHROME)  
P/N 08W40-SDB-100B (GOLD)

Application

**2006 ACCORD**  
**2- AND 4-DOOR**

Publications No.


**All 30665**

Issue Date


**AUG 2005**

## PARTS LIST

4 Center cap emblems

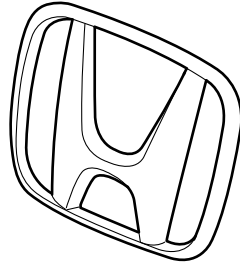

8 Push nuts



## SUPPLIES REQUIRED

Isopropyl alcohol


Shop towel

## INSTALLATION

### NOTE:

- Be careful not to damage the wheel center cap when installing the emblems.
- This center cap emblem kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to “cure,” do not wash the car for 24 hours.
- These instructions are for one center cap emblem. The same procedure applies to installing the three remaining center cap emblems.

1. Using isopropyl alcohol on a shop towel, clean the area where the center cap emblem will attach.
2. Remove the adhesive backing from the center cap emblem.
3. Attach the center cap emblem to the wheel center cap by aligning its pins with the holes in the wheel center cap. After attaching, hold the emblem firmly against the wheel center cap with the palm of your hand for 30 seconds.

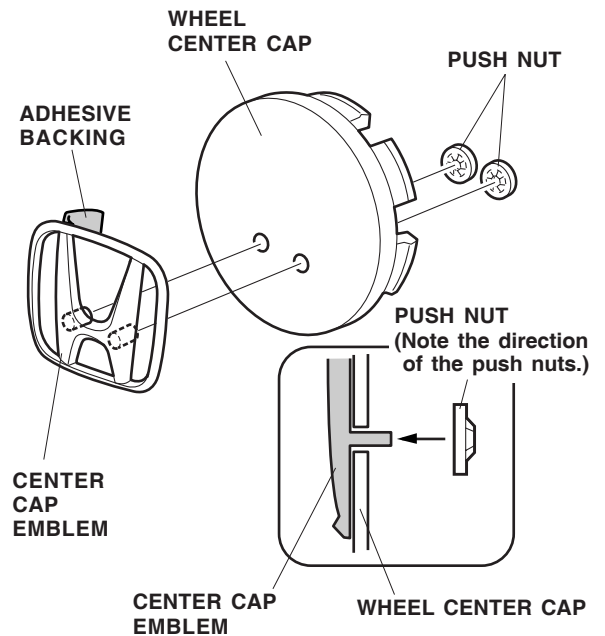

4. Slide the push nuts onto the pins flat side first. Note the direction of the push nuts.
5. Repeat steps 1 thru 4 to install the three remaining center cap emblems.