

# HONDA INSTALLATION INSTRUCTIONS

Accessory  
**CARGO NET**  
P/N08L96-SWA-100


Application  
**2007 CR-V**

Publications No.  
**All 32965-34025**

Issue Date  
**OCT 2006**

## PARTS LIST

Cargo net

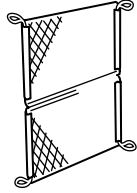


4 Snaps



## INSTALLATION

1. Fold the cargo net and attach the four snaps on the cargo net as shown.

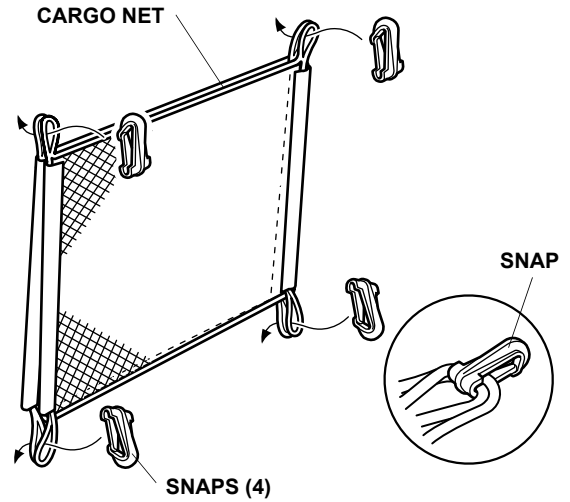

### *Installation in the Horizontal Position:*

2. Attach the snaps to the tie-down hooks in the cargo area.

