

	Accessory	Application	Publications No.
INSTALLATION	ROOF RACK P/N 08L02-SCV-100	2006 ELEMENT	Issue Date
INSTRUCTIONS			OCT 2005
Put this information in the glove box with the vehicle owner's manual.			
PARTS LIST	IN	STALLATION	
Front roof rack		Customer Information: The info nstallation instruction is intender skilled technicians who have the equipment, and training to correct equipment to your vehicle. These not be attempted by "do-it-yourse	d for use only by proper tools, ctly and safely add procedures should
Rear roof rack	fin	OTE: Be careful not to damage t hished surfaces of the body when ck.	
	1.	Using a flat-tip screwdriver wr towel, remove the two front co rear covers from the roof trim	overs and the two
4 End covers		FLAT-TIP FLAT- SCREW COVER SCRE DRIVER (Save for your DRIVI customer.)	W (Save for your
12 Socket bolts			SHOP TOWEL
12 Plain washers	$\bigcirc$	SHOP TOWEL	
4 Rubber seals			
TOOLS REQUIRED Flat-tip screwdriver 5 mm Hex wrench Isopropyl alcohol Shop towel T-25 Torx wrench			

- 2. Clean the rubber seal attachment position with a shop towel moistened with isopropyl alcohol.
- 3. Remove the adhesive backing from the rubber seal, and attach the rubber seal to the inside of the roof trim as shown.
  - When attaching the rubber seal, align the center of the rubber seal with the hole at the center of the roof rack installation base as shown.
  - Attach the rubber seal with the ends aligned at the beginning of the curvature as shown.

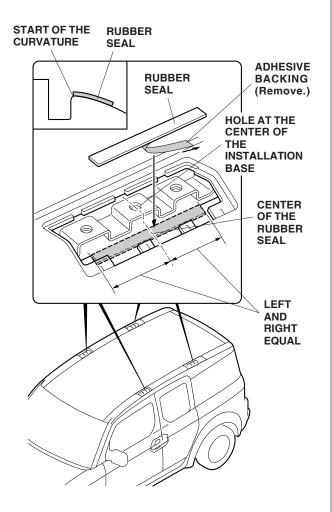


4. Attach the rubber seals to the remaining three locations in the same manner.


5. Position the front and rear roof racks on the roof in the proper locations as shown.

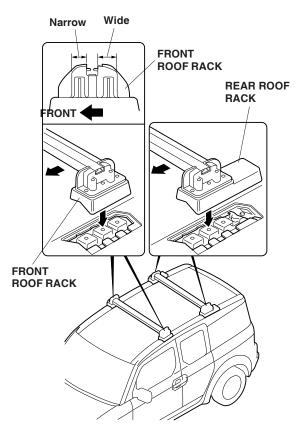

6. If the ends of the right and left roof racks are not aligned, adjust them by loosening the crossbar socket bolts, and moving the stays in or out as necessary.

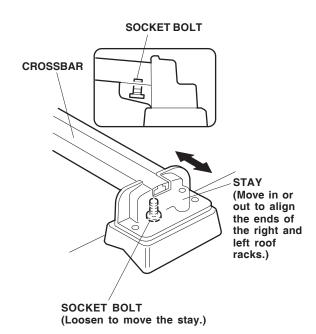

7. Install the roof racks with 12 socket bolts and 12 washers. Do not tighten.

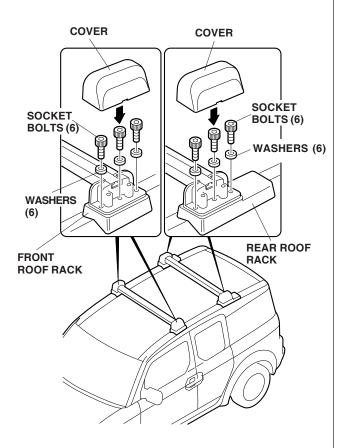

- Tighten the crossbar socket bolts (if loosened in step 6). Torque the 12 roof rack mountaing socket bolts to 9-10 N·m (6-7 lb·ft)
- 9. Install the four end covers.
- 10. Place the covers (removed in step 1) in the glove box for your customer to reinstall when the roof rack is removed.